
BACK STOPPER CLIPS

There are **two different clips**. Use the one made for your mount: they are **not interchangeable**.

OC200


PAGES 2–3

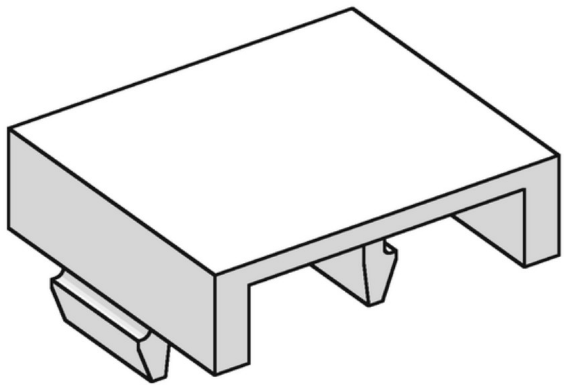

- 1 clip per mount
- About 20 × 17 mm, almost square
- Clicks into place
- Fits the OC200 tray only

ER605


PAGES 4–5

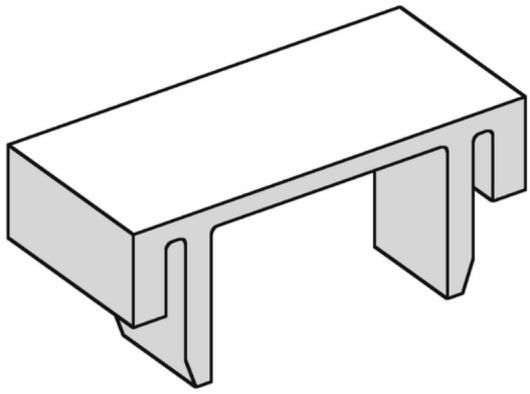


- 2 clips per mount
- About 24 × 11 mm, long and narrow
- Snug press fit, no click
- Fits the ER605 tray only

No tools needed. Fit the clip before you slide the device in.


ER605 BACK STOPPER CLIP

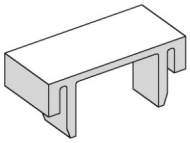
 2×

1 Back row of hexagons: use the **2nd** and **5th** whole hexagon (count from either side, skip the half hexagons).

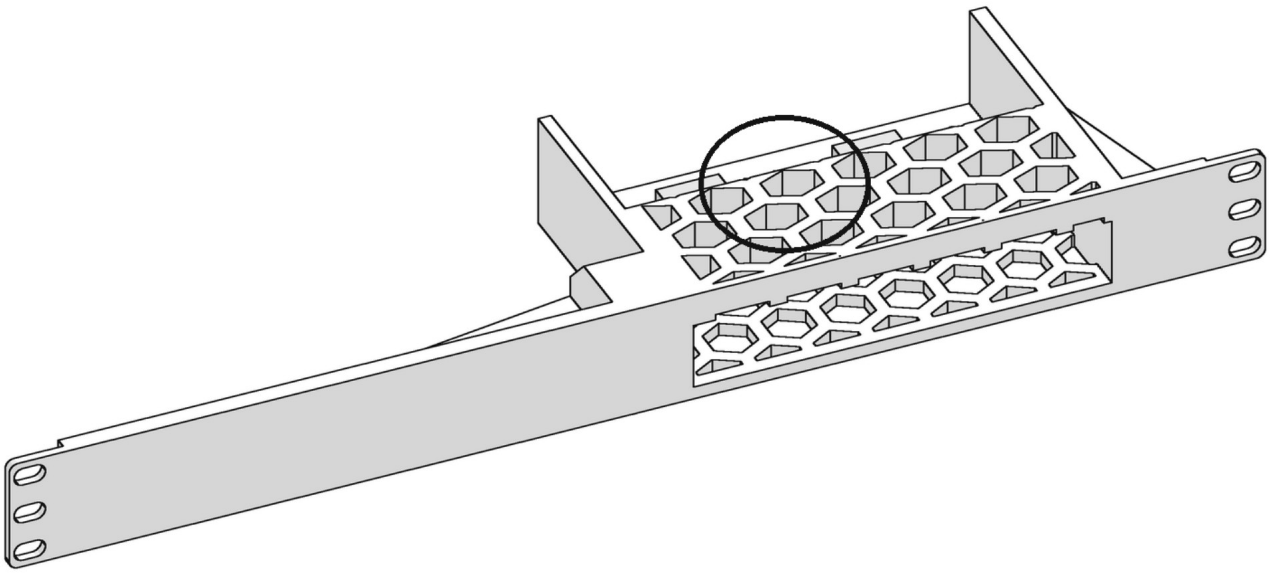


2 Flat face of the block toward the **front** of the tray (grey arrow →).
Won't go in? Turn the clip around 180°.

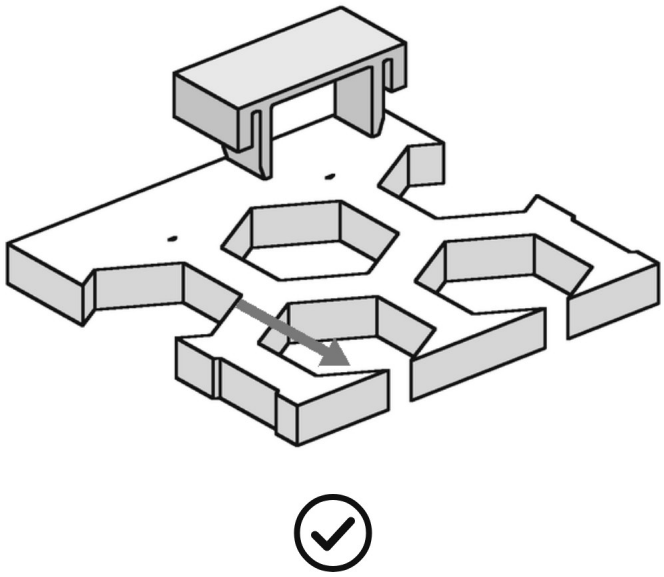

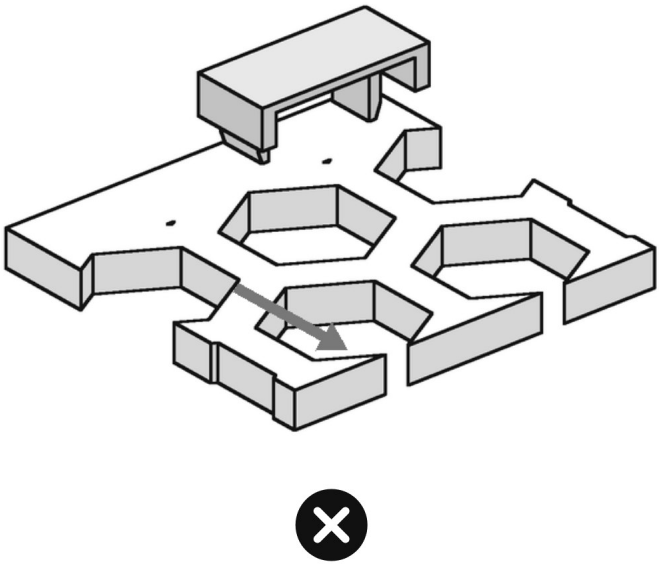



ER605 BACK STOPPER CLIP

3 Push straight down until the block sits flat. It is a snug press fit: no click.

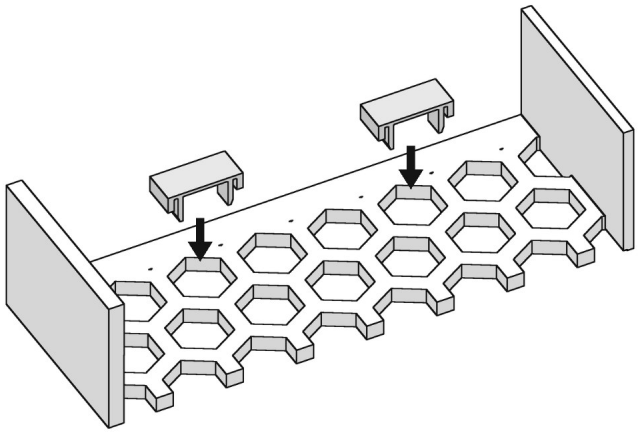


4 Both clips flat on the tray, stop faces toward the front.

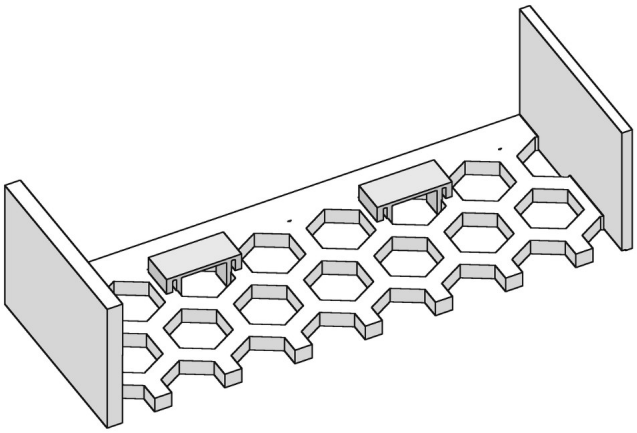

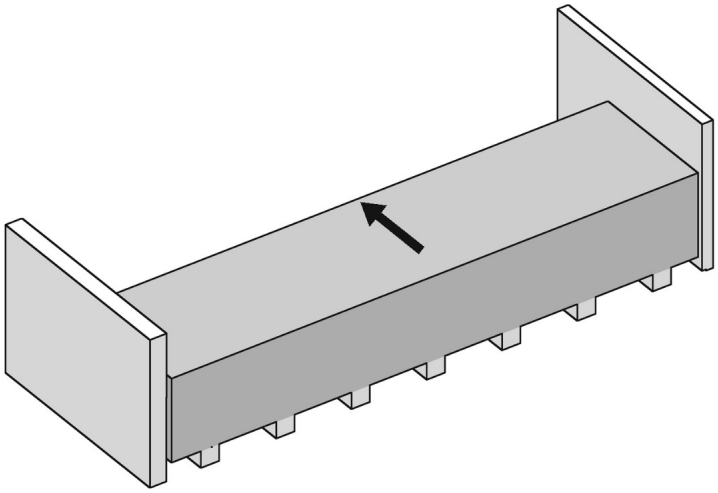

5 Slide the ER605 in from the front until it stops against both clips.

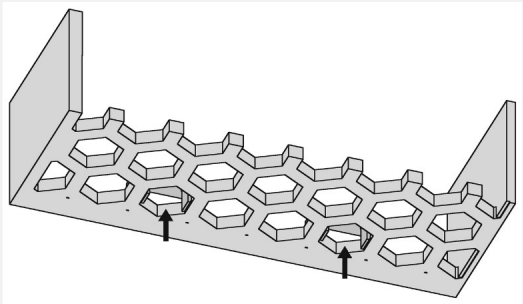

TO REMOVE

Push the prongs up from underneath the tray. The clip pops out.

Take the ER605 out first.