
BACK STOPPER CLIPS


There are **two different clips**. Use the one made for your mount: they are **not interchangeable**.

OC200/220 PAGES 2–3

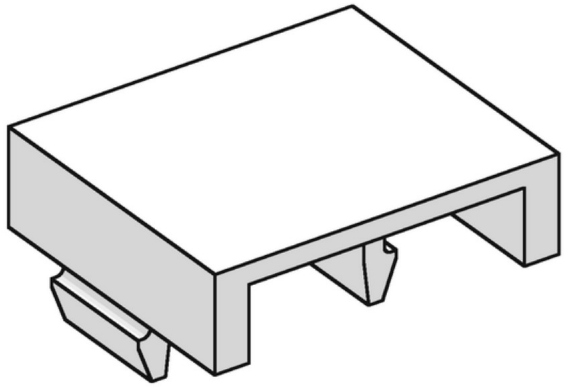

- 1 clip per mount
- About 20 × 17 mm, almost square
- Clicks into place
- Fits the OC200/220 tray only

ER605 PAGES 4–5

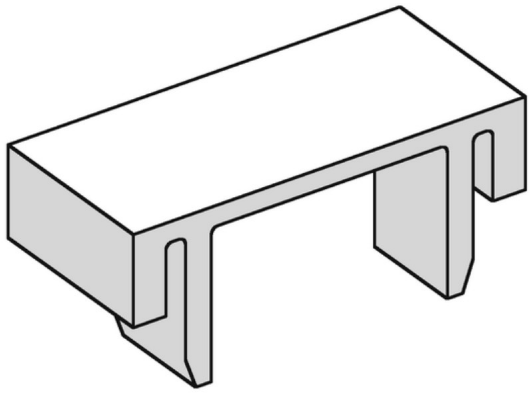


- 2 clips per mount
- About 24 × 11 mm, long and narrow
- Snug press fit, no click
- Fits the ER605 tray only

No tools needed. Fit the clip before you slide the device in.


OC200/220

BACK STOPPER CLIP

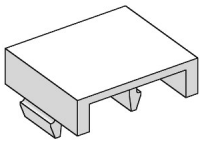



1×

1 Find the stopper spot: the back row of the OC200/220 bay.

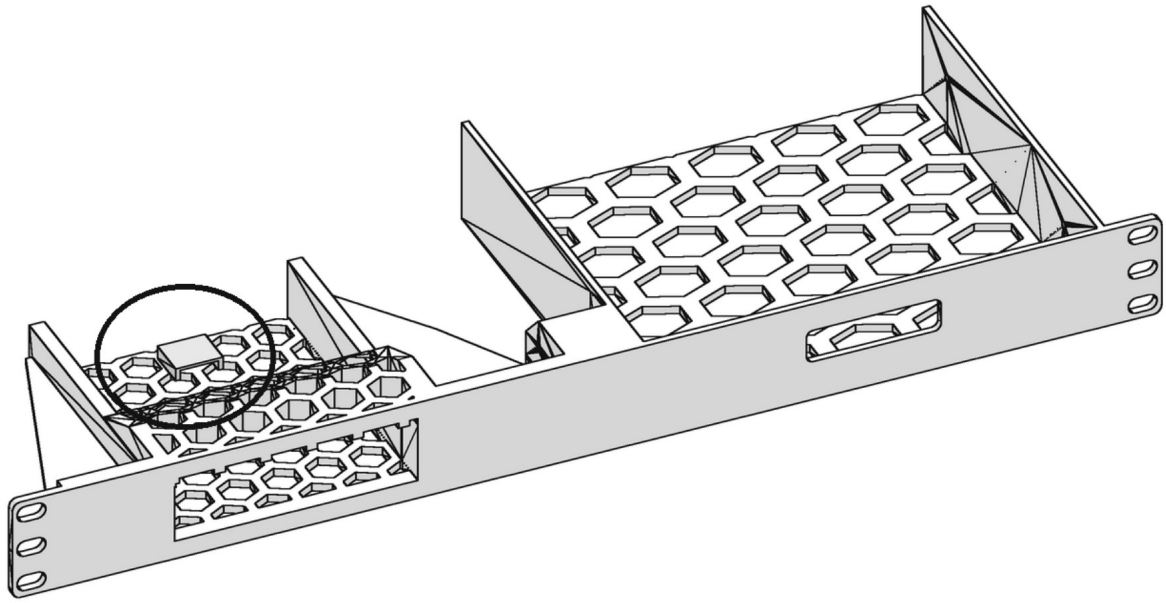


2 Flat face of the block toward the **front** of the tray (grey arrow →).
Won't go in? Turn the clip around 180°.

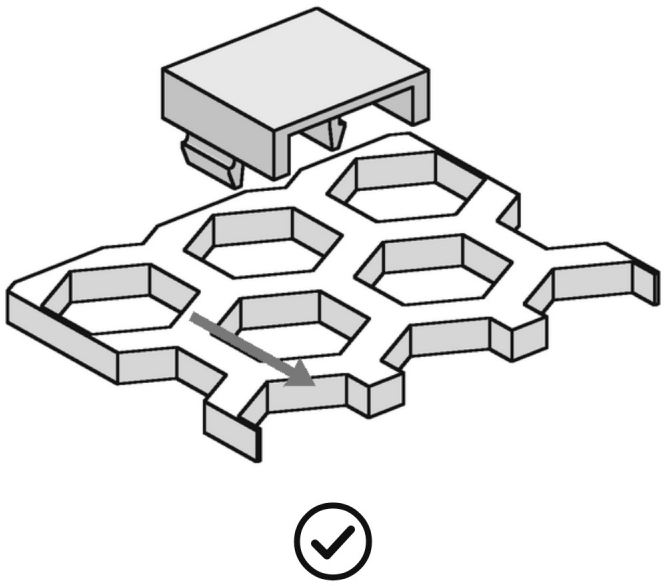

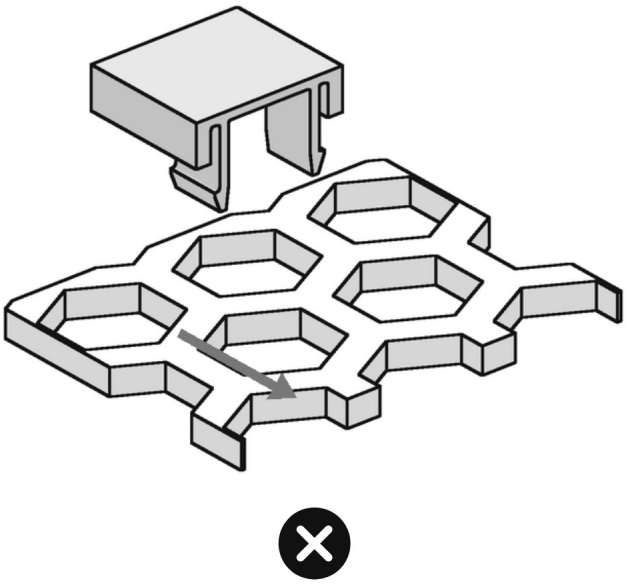



OC200/220 BACK STOPPER CLIP

3 Push straight down until it **clicks**.

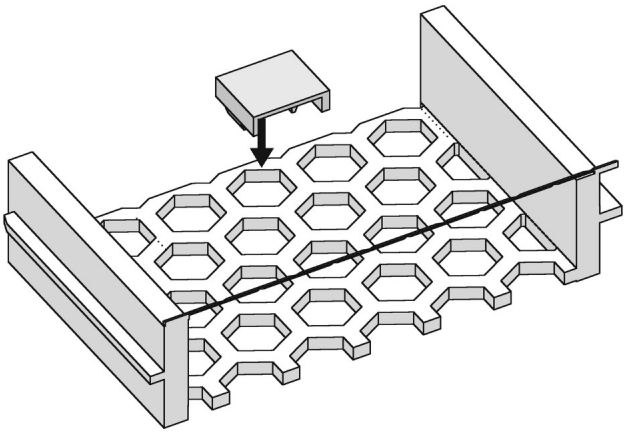


4 Click! The block sits flat on the tray.

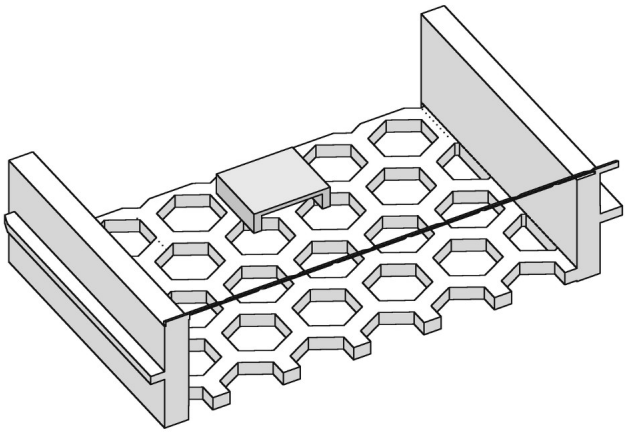

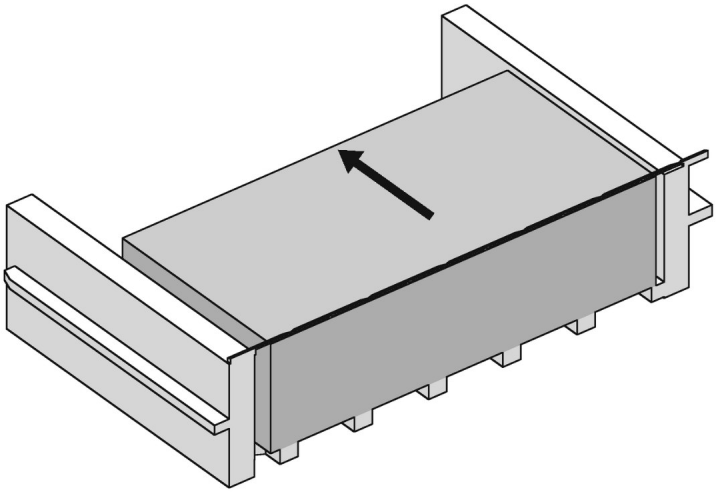

5 Slide the OC200/220 in from the front until it stops against the clip.

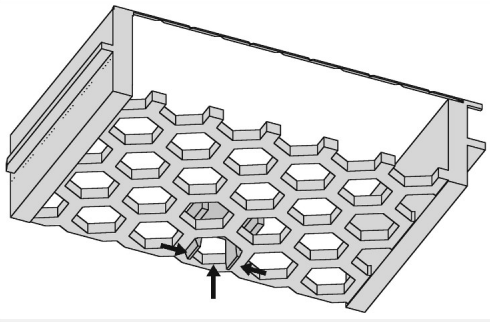

TO REMOVE

Squeeze the two prongs together from underneath, then push the clip up and out.

Take the OC200/220 out first.